

# intellaspot XT-I Support


## Installing Mac 3 Gobos in intellaspot fixtures

Due to a small variation in size between Mac 3 gobos and High End Systems intellaspot gobos, you will need to use the following steps for installing a Mac 3 gobo into an intellaspot gobo wheel.

1. Insert the retainer ring into the aperture first.



2. Lay the gobo on top of the retainer ring with coated side away from lamp.

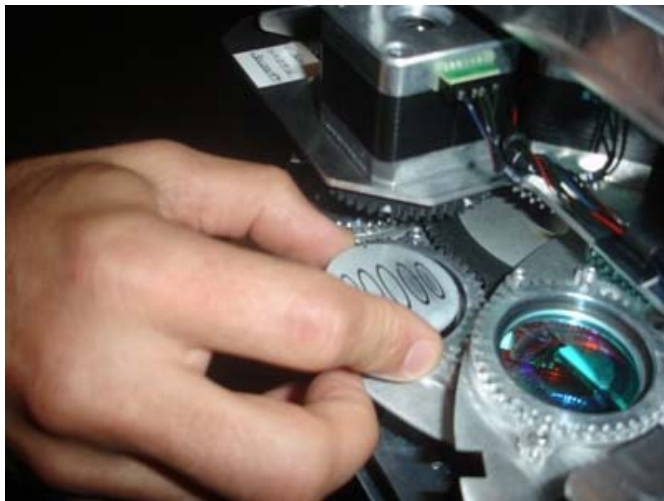

3. Install the spring and push the tip down and against the aperture to hold the gobo in place.

**Caution: Coated side of gobos are easily scratched. Be careful not to scratch with spring.**

