




## Subject: Replacing Lamp Socket Product Line: intellaspot™ XT-1

Use these steps to replace lamp socket p/n 80430145 in intellaspot XT-1 fixtures.

**1.** Remove head covers


**2.** Remove lamp chamber cover plate

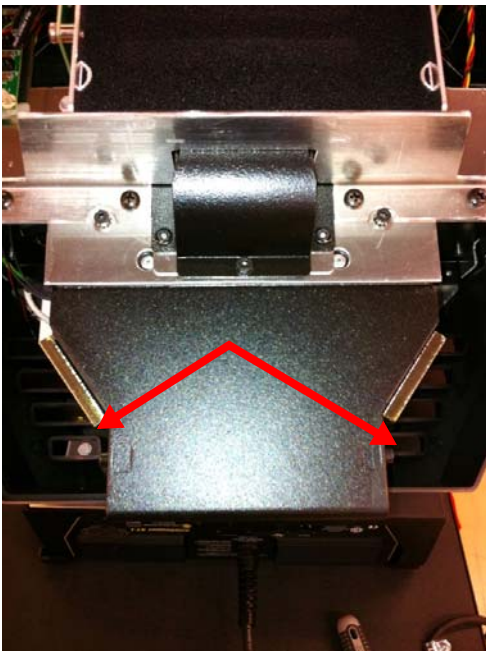


**4.** Pull harness through grommet



**3.** Use a flat head screwdriver to disconnect lamp wires in terminal block. Remove ground wire using 7mm nut driver.

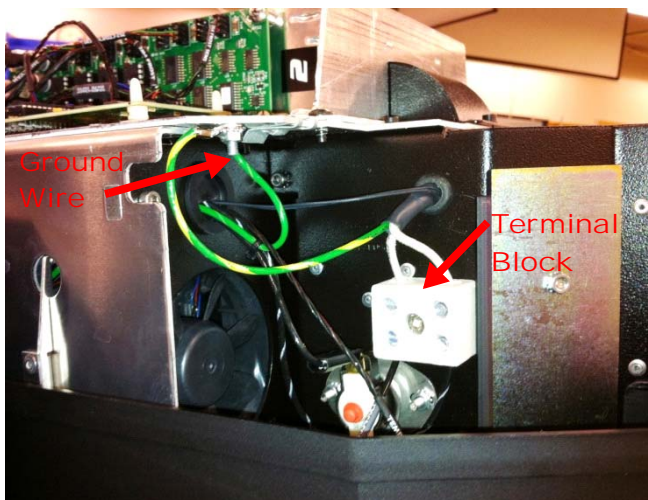

**5.** Remove lamp cap and lamp

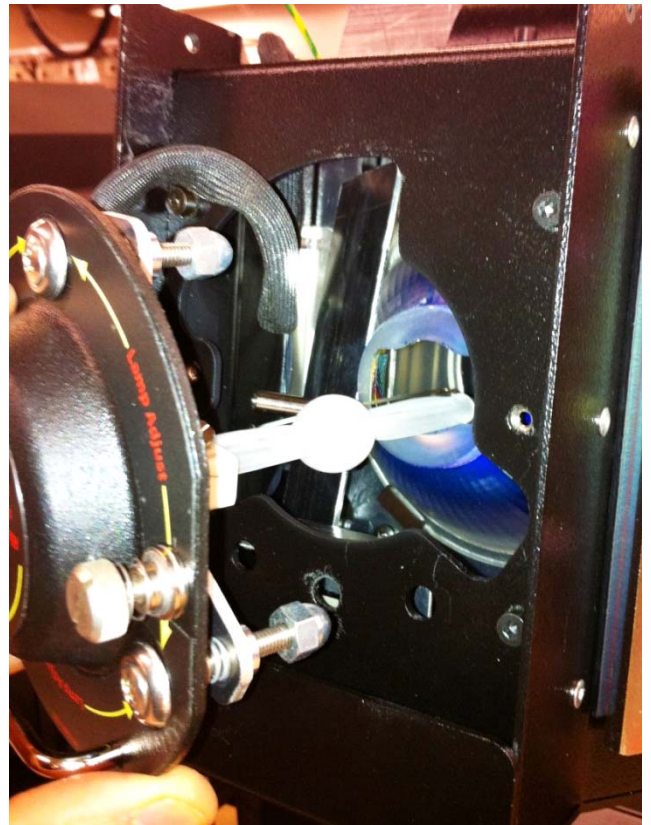


- 
- 6.** Replace lamp harness socket assembly using 2mm hex and 7mm nut driver.



- 
- 7.** Install lamp cap into unit without lamp installed.

- 
- 8.** Connect harness wires to terminal block and ground wire.

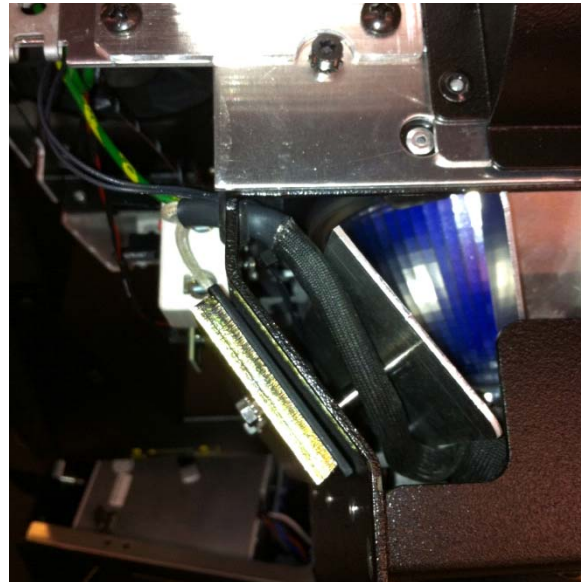

- 
- 9.** Reinstall lamp chamber cover plate and fixture covers.

- 
- 10.** Install lamp and optimize.